### **BASIC TECHNIQUES**

Work in such a way that you keep your hands and feet from under the forks and any load. Always place your hands on the control handles when manoeuvring the unit.

When loading and unloading, make sure that the weight is evenly distributed on the pallet so as not to over balance the load. Avoid piling the load up too high, it could topple.

Centre the forks under the load and move the control lever towards you to lift the pallet.

Raise the pallet just enough to clear the floor.

The load and Powered Stacker can now be pushed or pulled to their destination. For safety reasons, though, it will not turn through angles greater than 180 degrees.

Always position yourself so you can control the Powered Stacker while staying clear of the raised load.

Do not allow the unit to travel at speed or change its direction of travel abruptly.

Manoeuvre the unit to where the load is required. Raise the forks until the base of the pallet is approximately 25mm above the surface of the rack/shelf.

Carefully move the unit forward until the pallet is positioned over its final resting place. To stop the Powered Stacker from moving, place firm foot pressure on the toe brake.

Gently lower the forks until the pallet is being supported by the rack/shelf, then move the unit back and clear.

If a pallet is to be removed from a rack/shelf, simply reverse the above actions. Lower the load as soon as possible, DO NOT move the Powered Stacker with a raised load, there is a serious risk of the load and unit toppling over.

If the load is such a height that the operator can not see over it, the pallet truck must be pulled to its destination.

The unit should not be used on slopes, but may be moved on slight inclines provided the following precautions are adhered to.

Never turn a loaded pallet truck when on an incline. When on an incline, the operator MUST position him/herself so that the load faces downward.

Always keep a safe distance from the edge when on loading bays or loading ramps.

If the pallet truck is to be loaded into a lift, check that the lift's SWL is sufficient for the total weight of load and pallet truck. Ensure the load enters the lift first and exits last, no personnel should be in the lift when the pallet truck is being manoeuvred.

**Take your time and don't overdo it.** You are more likely to have an accident if you are tired or rushing.

# **EQUIPMENT CARE**

**Never push the equipment beyond its design limits.** If it will not do what you want with reasonable ease and speed, assume you have the wrong type of equipment for the job. Contact your local HSS Lift & Shift Depot for advice.

**Keep the equipment clean,** you will find this less of a chore if you clean it regularly, rather than wait until the end of the hire period.

DO NOT allow dangerous or corrosive chemicals to come in contact with any part of the Powered Stacker.

When not in use, store the equipment somewhere clean, dry and safe from thieves and unauthorised users.

### FINISHING OFF

**Give the Powered Stacker a final clean up, neatly coil the chargers leads ready for return**, to your local HSS Lift & Shift Depot.



# ...any comments?

If you have any suggestions to enable us to improve the information within this guide please fax your comments or write to the Product Manager at the address below

Fax: 0181-687 5001

©HSS Hire Service Group Plc 1999 No. LS24/01

Group Office: 25 Willow Lane, Mitcham, Surrey CR4 4TS

Web Site: http://www.hss-liftandshift.co.uk

# Operating & Safety Guide LS24

# **HSS Lift & Shift**



# Powered Stacker

A battery powered lifter stacker capable of lifting loads of up to 1000kg to a height of 3.3m.



Code 70226

 
#### **GENERAL SAFETY**

For advice on the safety and suitability of this equipment contact your local HSS Lift & Shift Depot.

There is a serious risk of personal injury if you do not follow all instructions laid down in this guide.

This equipment is designed to be used by an able bodied, competent adult who has read and understood these instructions. Anyone with either a temporary or permanent disability should seek expert advice before using it.

Keep children, animals and bystanders away from the work area. Cordon off a NO GO area using cones and either barriers or tape, available for hire from your local HSS Lift & Shift Depot.





Use this equipment for vertical lifts only and use on a level area able to take the combined weight of the load and the equipment.

Ensure the load is balanced, stable and that personnel stand clear of the raised load.

Make sure you know how to operate this equipment safely and are aware of its limitations before you use it.

# Warning

This equipment MUST NOT be used to carry personnel.

It is both the hirer's and the operator's responsibility to perform a risk assessment before using this equipment. You are also responsible for the safety of any person in the work area.


This equipment is not suitable for use in cold storage operations or where the floor has ice or oil deposits.

Make sure that anyone in the immediate work area is warned of what you are doing.

Be aware of the raised load when close to any overhead obstructions.

This equipment MUST NOT be used to carry unsecured loads.

Never exceed the lift's Safe Working Load of 1000kg. Do not use this equipment to raise items, which are longer than the Powered Stacker's forks. Ensure the load is either attached to a suitable pallet or a specially designed base.

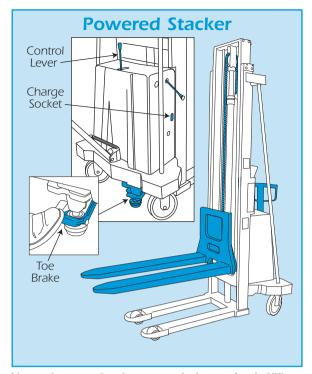

Never leave a load unattended or raised. When not in use, park the Powered Stacker on level ground where the forks will not cause a trip hazard.

Ensure the work area is well lit.

When moving loads keep to a sensible pace. If you go too fast, or if you try to wheel a heavy load down a slope, it could run away with you.

Check the condition of the equipment before use. If it shows signs of damage or excessive wear, return it to your local HSS Lift & Shift Depot.

## **ELECTRICAL SAFETY**

The HSS Powered Stacker is powered by a 12V battery. The battery is fitted to the unit and the charger is supplied as a separate item.

The battery charger is designed to plug into a standard 240V 13A power supply

To recharge the battery, with the charger switched OFF, plug the charge lead into the charge socket on the side of the Powered Stacker (see illustration).

Only recharge the batteries in a well-ventilated area. Keep the charging area clear of naked flames, DO NOT SMOKE. Avoid contact with battery acid.

Next plug the charger into a suitable power supply and switch the supply and charger ON, the amber lamp will illuminate to confirm recharging has started.

The charger will recharge the battery in approximately 8 hours, once fully charged the green lamp on the charger will illuminate.

Once fully charged, switch OFF and unplug the unit from its power supply.

Using the charger in very damp or wet conditions can be dangerous.

To reduce the risk of electric shock, use a suitable RCD (Residual Current-Operated Device) available from your local HSS Lift & Shift Depot.


If the charger fails, or if the charger's power supply cable or plug gets damaged, return it. Never try to repair it yourself.

If an **extension lead** is used for the charger it **should** be **fully unwound and loosely coiled**, away from the equipment. Never run leads through water, over sharp edges or where they could trip someone.


Never carry or pull the charger by its power supply cable.

# **GETTING STARTED**

Please note that this type of Powered Stacker cannot be used for lifting pallets which are constructed with both top and bottom slats (see illustration).

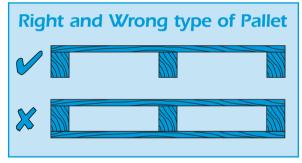

DO NOT use on slopes, soft ground or where there is a risk of subsidence.

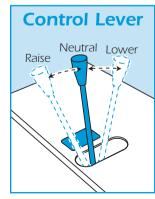

The Powered Stacker is controlled by a single lever, which has three positions (see illustration). To raise the forks, move

the control lever back towards you. The further back the lever is moved the faster the forks travel.

To lower the forks, move the control lever forward away from you. Again, the further forward the lever is moved the faster the forks descend.

Be especially careful when lowering and keep your hands and feet clear of the load.